

JVC

Bluetooth® Bookshelf Speakers

XS-D629BM

Instruction Manual



 Bluetooth®

Contents

Safety Warnings	4
Unpacking	6
Product Overview	7
Main Unit.....	7
Remote Control	8
Preparation	9
First-time use of Remote Control.....	9
Battery Replacement for the Remote Control	9
Remote Control Operation Range.....	10
Connections	10
Connecting the Speakers.....	10
AUX Connection	11
Connecting a USB device.....	12
Charging from the USB CHARGING Port	12
Connecting to the Mains Supply	13
General Operation	14
Standby / ON	14
Auto Standby.....	14
Selecting Modes.....	14
Adjusting the Speaker Level Settings and Effects.....	14
AUX IN Operation	14
Bluetooth® Operation	15
Listen to Music from Bluetooth Device	15
USB Operation	16
Maintenance	16
Hints and Tips	17
Product Fiche and Specifications	18
Other Information and Licences	19

Safety Warnings

- Read all the instructions carefully before using the unit and keep them for future reference.
- Retain the manual. If you pass the unit onto a third party make sure to include this manual.
- Check that the voltage marked on the rating label matches your mains voltage.

Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it working normally, or if it is damaged in any way - switch off, withdraw the mains plug and consult your dealer.

Location of Unit

- The unit must be placed on a flat stable surface and not subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas / electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit. Do not operate the unit with wet hands, near water or other liquid.
- If you spill any liquid into the unit, it can cause serious damage. Switch it off at the mains immediately. Withdraw the mains plug and consult your dealer.

Ventilation

- To prevent the risk of electric shock or fire hazard due to overheating, ensure that curtains and other materials do not

obstruct the ventilation vents.

- A minimum distance of 5 cm around the unit should be maintained to allow for sufficient ventilation.
- Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure the unit is well ventilated.

Safety

- Always disconnect the unit from the mains supply before connecting / disconnecting other devices or moving the unit.
- Unplug the unit from the mains socket during a lightning storm.
- In the interests of safety and to avoid unnecessary energy consumption, never leave the unit switched on while unattended for long periods of time, e.g. overnight, while on holiday or while out of the house. Switch it off and disconnect the mains plug from the mains socket.

Mains Cable

- Make sure the unit or unit stand is not resting on top of the mains cable, as the weight of the unit may damage the mains cable and create a safety hazard.
- If the mains cable is damaged it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.



The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

Interference

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the operating performance of the unit, and cause a distorted picture or sound.

Batteries

- Batteries used in the unit are easily swallowed by young children and this is dangerous.
- Keep loose batteries away from young children and make sure that the battery holder tray is secure in the unit. Seek medical advice if you believe a cell has been swallowed.
- Please dispose of batteries correctly by following the guidance in this manual.

- Do not expose the battery to direct sunlight or sources of excessive heat.
- Do not ingest the battery - Chemical Burn Hazard.
- The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- Keep new and used battery away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Supervision

- Children should be supervised to ensure that they do not play with the unit and the remote control.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the unit’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.




The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the manual accompanying the unit.

Service

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

Maintenance

- Ensure to unplug the unit from the mains socket before cleaning.

- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit’s surface.
- Do not use liquids to clean the unit.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

~ **AC voltage:** This symbol indicates that the rated voltage marked with the symbol is AC voltage.

≡ **DC voltage:** This symbol indicates that the rated voltage marked with the symbol is DC voltage.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.

Thank you for purchasing your new product.

 
We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.

Read all the safety instructions carefully before use and keep this instruction manual for future reference.



Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.


The following items are included:

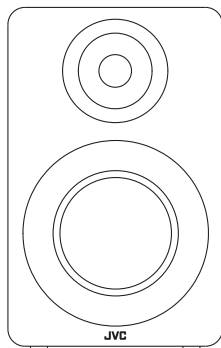


Main Unit

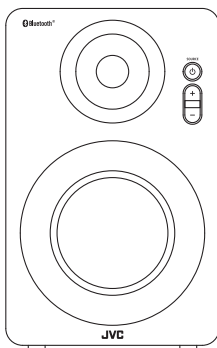  


Remote Control
(Battery included)

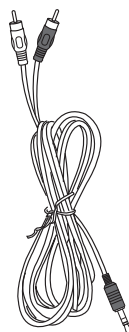 


RCA to 3.5 mm
stereo audio cable

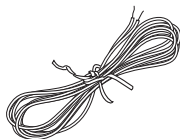 

Speaker cable

 

Mains cable

 

Instruction Manual



Quick Start Guide

 


- If items are missing, or damaged please contact Partmaster (UK only). Tel: 0344 800 3456 for assistance.
- If you require additional assistance:
For UK, please call our UK Call Centre on **0344 561 1234**.
For Ireland, please call our Ireland Call Center on **1 890 818 575**.

Product Overview

 
Main Unit

Front View (right speaker)

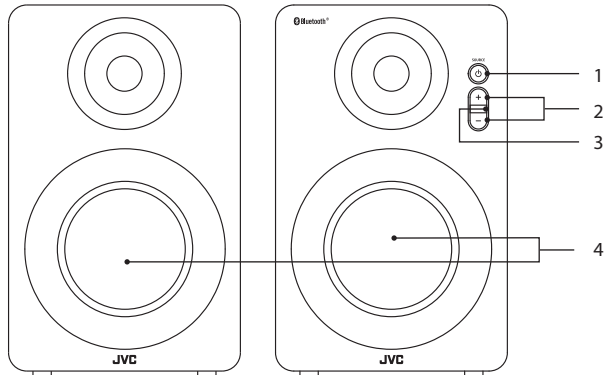





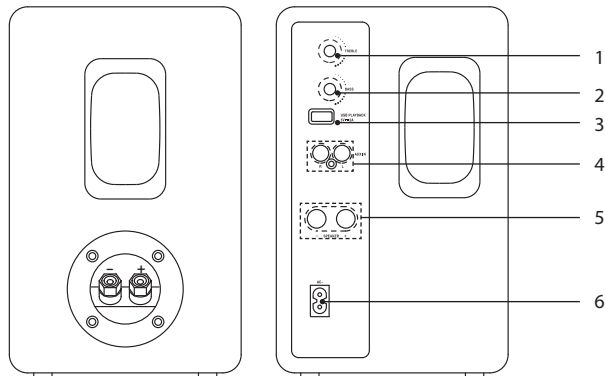

1. **SOURCE** Button
 - Press to switch on the unit.
 - Press and hold to switch off the unit.
 - In **Standby** mode: Light up red
 - In **AUX IN** mode: Light up green
 - In **BT** mode: Light up blue
 - In **USB** mode: Light up yellow
 - The status indicator flashes quickly while adjust volume/bass/treble level.
2. **+/-** Button
 - Press to increase/decrease volume level.
 - In **BT** mode, press both +/- buttons to clear all pairing settings.
3. **Remote Control Sensor**
4. **Speakers**

 
Rear View



1. **TREBLE** Dial
2. **BASS** Dial
3. **USB PLAYBACK 5V 2.0A** Socket
4. **AUX IN L/R** Sockets
5. **-SPEAKER+** Sockets
6. **AC~** Socket

Remote Control

1.  Button
Switch the unit between **On** and **Standby** mode.
2.   Button
Skip to previous/next track in **BT/USB** mode.
3.   Button
Play / pause / resume playback in **BT/USB** mode.
4. **BT** Button
Switch to **BT** mode.
5. **AUX** Button
Press to switch to **AUX IN** mode.
6. **USB** Button
Press to switch to **USB** mode.
7. **PAIR** Button
 - Press to activate the pairing function in BT mode.
 - Press to disconnect the existing the paired Bluetooth device.
8. **VOL +/-** Buttons
Press to increase/decrease the volume level.
9.  **MUTE** Button
Mute the unit or resume the sound.

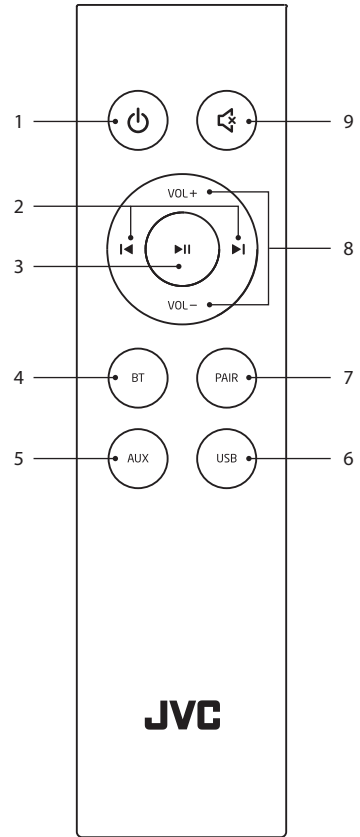


Preparation

First-time Use of Remote Control

The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.

Battery Replacement for the Remote Control

 1. Gently push the tab of the battery tray in and slide it free from the remote control.
2. Replace with a new CR2025 battery.
3. Slide the tray back into the remote control. There will be a click once it is back in place.

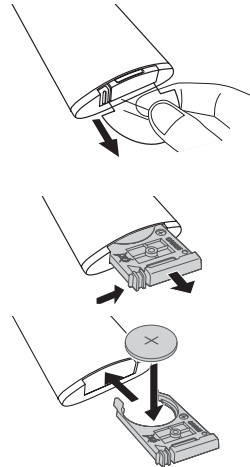

Handling the Battery

- Improper or incorrect use of batteries may cause corrosion or battery leakage, which could cause fire, personal injury or damage to property.
- Only use the battery type indicated in this manual.
- Do not install new batteries with used ones and do not mix different types of batteries.
- Do not dispose of used batteries as domestic waste. Dispose of them in accordance with local regulations.

 
Handling the Remote Control

- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and / or property damage, and / or fire.
- When the battery is exhausted, the remote control will not function.

Remote Control Operation Range

- The remote control sensor on the front unit is sensitive to the remote control's commands up to a maximum of 6 metres away and within a maximum of a 60° arc.
- Please note that the operating distance may vary depending on the brightness of the room.

Front View of the right speaker

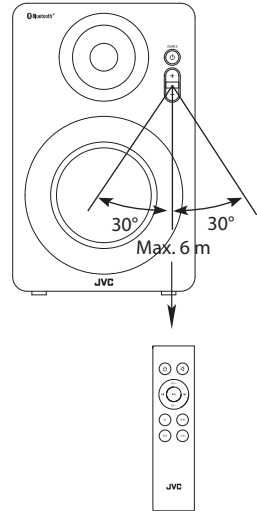


Connection

Connecting the Speakers

Connect the speakers (L & R) with the speaker cable. Make sure that the red/black cable is connected to the + socket and the silver cable is connected to the - socket of both speakers.

Rear view of the Left Speaker

 
Rear view of the Right Speaker

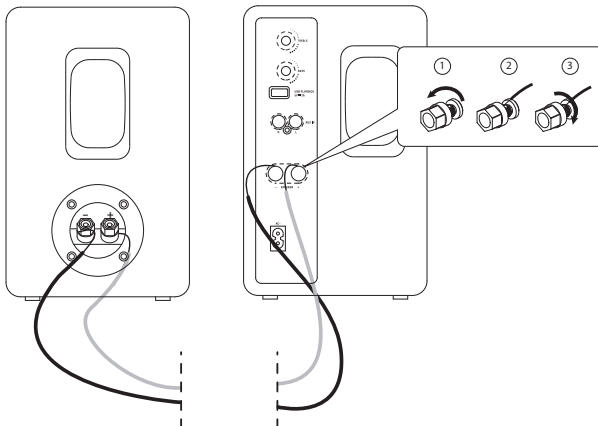

AUX Connection

Use an 3.5 mm to RCA Stereo Audio Cable (included) / RCA to RCA Stereo Audio Cable (not included) to connect the **AUX IN** socket to the **AUDIO OUT** sockets of the external device.

 
After connection, press on the remote control to select to play audio from your input device.

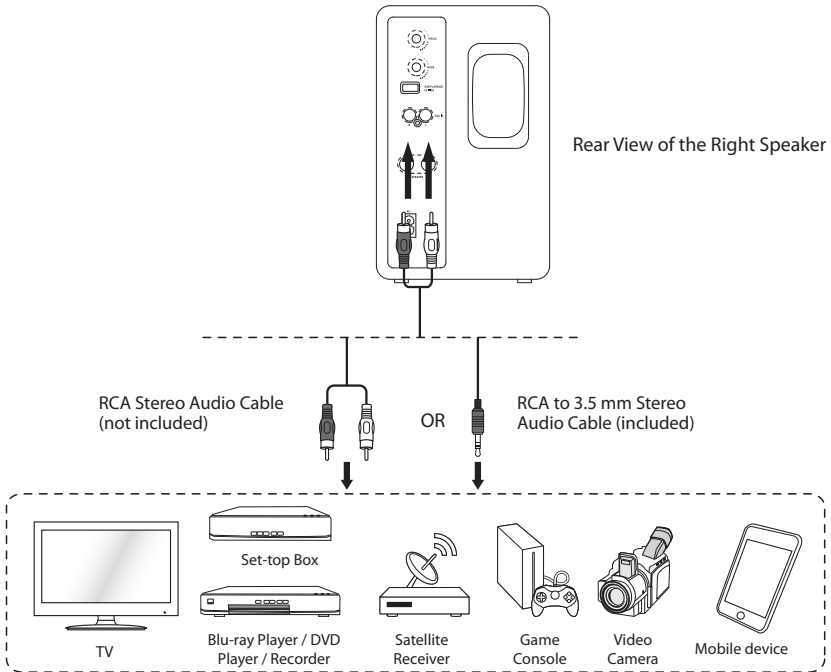

Ensure to match the colour on the cable plugs to the colour on the input and output sockets.

Connecting a USB device

 
When a USB device is connected to the unit, press **SOURCE** button repeatedly on the unit or press **USB** button on the remote control to select USB mode.

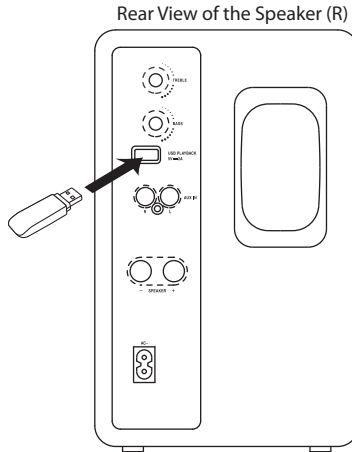

Charging from the USB CHARGING Port

The **USB PLAYBACK 5V $\overline{\text{DC}}$ 2.0A** port is designed only for charging mobile devices (e.g. MP3 player, mobile phone, etc). It supplies 5V DC at a charging current of up to 2000mA (2.0A).

 Use a USB cable (not included) to connect mobile device to the **USB PLAYBACK 5V $\overline{\text{DC}}$ 2.0A** port of the unit and the mobile device will start charging.

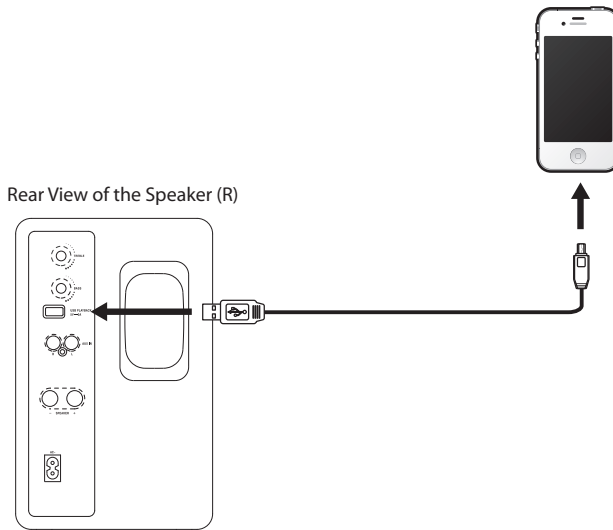


ONLY use the **USB PLAYBACK 5V $\overline{\text{DC}}$ 2.0A** port to charge small mobile devices. NEVER use this port for any other purpose.

Connecting to the Mains Supply

- This unit is designed to operate with an AC power supply.
- Connecting the unit to any other power source may cause damage to the unit. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. The unit is now connected and ready to use.
- To switch the unit off completely, unplug the mains plug from the mains socket.



 - Ensure all audio connections of the unit are connected before connecting to the mains power socket.
- Please turn the unit off completely to save energy when not in use.
- The mains cable is designed for this JVC speaker only. DO NOT use the mains cable for other purposes.

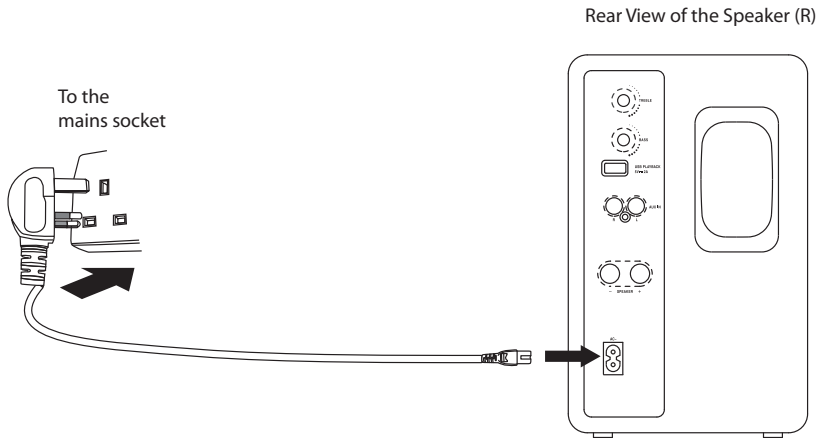

General Operation

Standby / ON

When you first connect the unit to the mains socket, the unit will be in **Standby** mode. The **⏻ SOURCE** button will light up red.

To switch on the unit,

- Press **⏻ SOURCE** button on the unit, or **⏻** button on the remote control.

To switch off the unit,

- Press and hold **⏻ SOURCE** button on the unit.
- Press **⏻** button on the remote control.

The **⏻ SOURCE** button will light up red. Disconnect the mains plug from the mains socket if you want to switch the unit off completely.



The status indicator of the last used mode will light up after the unit is switched on.

Auto Standby

When there is no input signal (or weak input signal) for over 15 minutes, the unit will automatically switch to **Standby** mode.

Selecting Modes

Press **⏻ SOURCE** button repeatedly on the unit, or **BT/AUX/USB** button on the remote control to switch between **BT/AUX IN/USB** mode.

Adjusting the Speaker Level Settings and Effects

Adjusting the Volume

- Press **+/-** on the unit or **VOL+/VOL-** on the remote control to increase/decrease the volume.
- If you wish to turn the sound off, press **⏻** on the remote control. Press **⏻** again, or press **+/-** on the unit or **VOL+/VOL-** on the remote control to resume normal listening.

Adjusting the Bass Volume Level

Turn **BASS** knob clockwise/anti-clockwise to adjust the bass level.

Adjusting the Treble Volume Level

Turn **TREBLE** knob clockwise/anti-clockwise to adjust the treble level.

AUX IN Operation

1. Before connecting to the mains socket, ensure all the connections are completed.
2. While in **On** mode, press **⏻ SOURCE** button repeatedly on the unit, or **AUX** button on the remote control to select **AUX IN** mode.
3. Operate your audio device directly for playback features.

Bluetooth® Operation

Pairing the unit with a *Bluetooth*® device to listen to music:

First time pairing

1. While in **On** mode, press **⏻ SOURCE** button repeatedly on the unit, or **BT** button on the remote control to select **BT** mode. The **⏻ SOURCE** button will flash in blue.
2. Activate your *Bluetooth*® device and select the search mode. "**XS-D629BM**" will appear on your *Bluetooth*® device list.
3. Select "**XS-D629BM**" and enter "**0000**" for the password if necessary. After pairing, you will hear "**Paired**" from the unit, and the **⏻ SOURCE** button will light up in blue.

If your *Bluetooth*® device supports A2DP, play music via your device.

To disconnect the *Bluetooth*® function,

- Switch to another function on the unit;
- Disable the function from your *Bluetooth*® device. You will hear "**Disconnected**" from the unit.
- You may also press and hold **+/-** button on the unit or **PAIR** button on the remote control for about 2 seconds to clear all pairing settings. You will hear "**Pairing**" from the unit. The LED indicator will flash in blue, and the unit is now ready for pairing. Follow step 2-3 in "**First time pairing**" above to pair your *Bluetooth*® device.




- The operational range between the unit and the device is approximately 8 metres.
- Before connecting a *Bluetooth*® device to the unit, ensure you know the device's capabilities.
- Compatibility with all *Bluetooth*® devices is not guaranteed.
- If no other *Bluetooth* device pairs with this player within two minutes, the player will recover its previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- Any obstacle between the device and the unit can reduce operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

Listen to Music from Bluetooth Device

- If the connected *Bluetooth* device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
 2. Play music via your device (if it supports A2DP)
 3. Use supplied remote control to control play (if it supports AVRCP)
 - To pause/resume play, press **▶||** button.
 - To skip to a track, press **◀|▶** button.

USB Operation

1. Insert the USB device to the **USB PLAYBACK 5V 2.0A** socket on the unit.
2. Press **SOURCE** button repeatedly on the unit or press the **USB** button on the remote control to switch to **USB** mode.
3. The unit will play music automatically.
 - To pause/resume play, press **▶||** button on the remote control.
 - To skip to a track, press **◀|▶** buttons on the remote control.

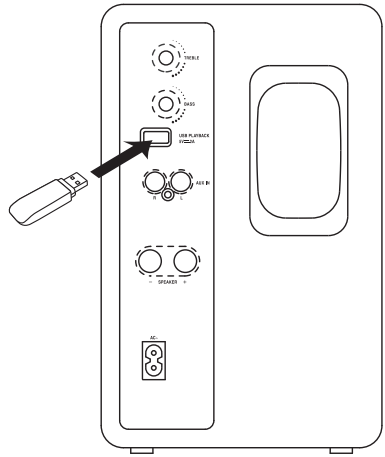 

Maintenance




Ensure the unit is fully unplugged from the mains socket before cleaning.

- To clean the units, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

Hints and Tips

If a problem does occur, it may often be due to something very minor. The following table contains various tips. If you require additional assistance please click on the link for Support Centre:

- For UK, please call our UK Call Centre on 0344 561 1234.
- For Ireland, please call our Ireland Call Center on 1 890 818 575.

Problem	Solution
No power.	<ul style="list-style-type: none"> • Make sure that the mains plug is connected. • Make sure that there is a power at the mains socket. • Make sure that you select the On mode.
The remote control does not function.	<ul style="list-style-type: none"> • Use the remote control near the unit. • Point the remote control at the remote sensor on the unit. • Replace the battery in the remote control with a new one. • Remove any obstacles between the remote control and the unit.
No sound.	<ul style="list-style-type: none"> • Press + on the unit or VOL+ on the remote control to increase the volume. • Press  button on the remote control to ensure the unit is not muted. • Select a different input source. • If using BT mode, ensure that the volume on your source device is turned up and that the device is not muted.
The unit switches back to Standby mode automatically.	<ul style="list-style-type: none"> • When the unit's external input signal level is too low, or is idle for approximately 15 minutes, it will automatically switch to Standby mode for power saving. Please increase the volume level of your external device.
The unit does not respond when pressing any buttons.	<ul style="list-style-type: none"> • The unit may freeze up during use. Switch the unit off and then on again at the mains socket to reset the unit.
I cannot find " XS-D629BM " on my <i>Bluetooth</i> [®] device.	<ul style="list-style-type: none"> • Ensure the <i>Bluetooth</i>[®] function is activated on your <i>Bluetooth</i>[®] device. • Ensure you have paired your unit with the <i>Bluetooth</i>[®] device.
Unable to insert USB device or memory Card	<ul style="list-style-type: none"> • Insert the USB device or memory card the other way round.
Cannot play some files from USB device or memory Card	<ul style="list-style-type: none"> • Check the file format. • Only MP3 file formats are supported.
USB port not charging	<ul style="list-style-type: none"> • Make sure the allowable charging current of the mobile device is compatible with the unit's charging current (2000 mA or 2.0 A). Otherwise, use the mobile device's own charging adapter for charging.



If any anomaly is encountered, unplug the mains cable from the mains socket and reconnect it again.

Product Fiche and Specifications

Brand	JVC	
Model	XS-D629BM	
Power Supply Input	AC220-240V~ 50-60Hz	
Power Consumption	35 W	
Standby Power Consumption	< 0.5 W	
Output Power	2 × 30 W rms	
Frequency Response	50 Hz - 20 KHz	
USB (Charging)	5 V $\overline{\text{---}}$ 2.0 A	
Total harmonic distortion	1% (1 kHz, 1 W)	
Audio input sensitivity	700 mV	
Impedance	8 Ω	
Bluetooth®	Version	V4.2
	Maximum power transmitted	5 dBm
	Frequency bands	2402 MHz ~ 2480 MHz
Net Weight	4.55 kg	
Dimension	152 mm (W) × 243 mm (H) × 215 mm (D)	

Features and specifications are subject to change without prior notice.

Other Information and Licences



Team Knowhow

Help with all life's kit®

For general information about appliances, and handy hints and tips check out Kit Guides at **teamknowhow.com** or

call UK: **0344 561 1234**

Ireland: **1890 818 575**

Partmaster
CO.UK

Visit Partmaster.co.uk today for the easiest way to buy electrical spares and accessories. With over 1 million spares and accessories available we can deliver direct to your door the very next day. Visit www.partmaster.co.uk or call 0344 800 3456 (UK customers only). Calls charged at National Rate.



The symbol on the product or its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority, or where you purchased your product.

Notes for battery disposal



The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste.

For more information, please contact the local authority or your retailer where you purchased the product.

The *Bluetooth*® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by DSG Retail Limited is under license. Other trademarks and trade names are those of their respective owners.

All trademarks are the property of their respective owners and all rights are acknowledged.

For Help and Support Call

UK: 0344 561 1234

Ireland: 1890 818 575

DSG Retail Ltd. (co. no. 504877)
1 Portal Way, London, W3 6RS, UK

EU Representative
DSG Retail Ireland Ltd (259460)
3rd Floor Office Suite, Omni Park SC
Santry, Dublin 9, Republic of Ireland

The product is distributed and warranted exclusive by DSG Retail Ltd.
"JVC" is the trademark of JVC KENWOOD Corporation,
used by DSG Retail Ltd. under license.

(IB-XS-D629BM-180402V2)